


Temporary Solution of External Connected RSD Switch For 12KW Hybrid Inverter

1. Internal cable connecting condition of default shipping product

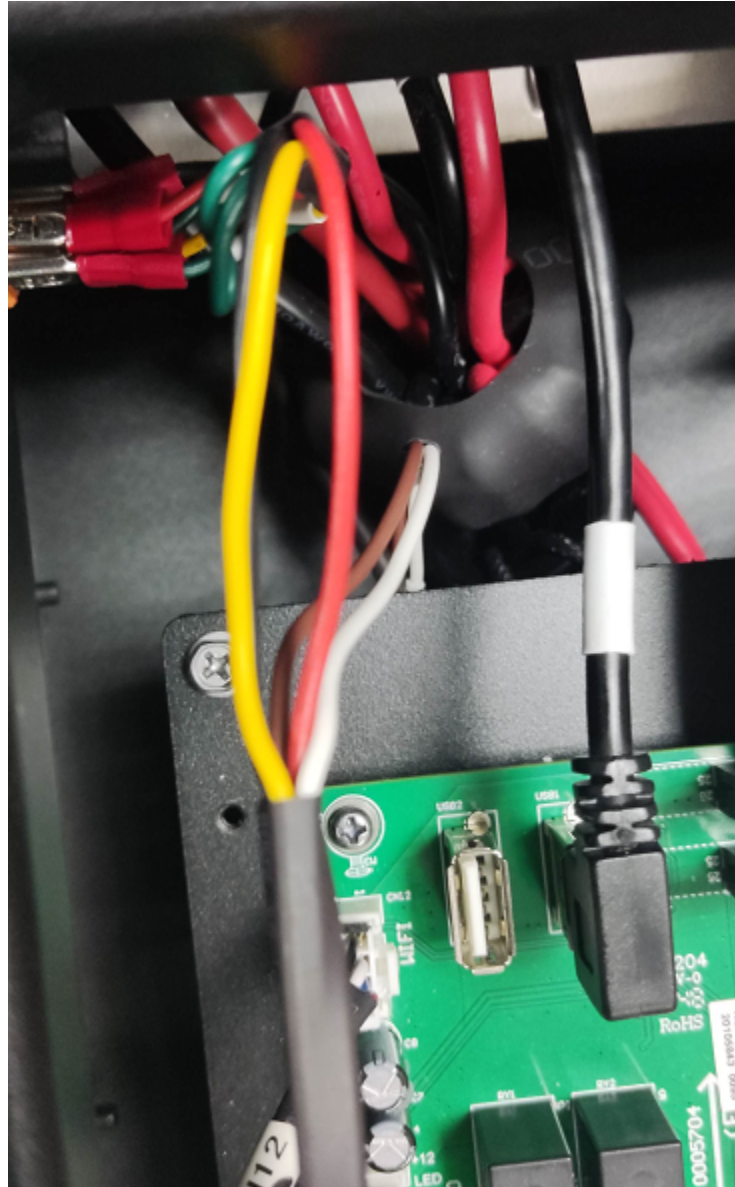

2. Step of connecting an external RSD Switch


(1) Step 1: Disconnect the Live Line as what have been shown in following Pictures.




(2) Step 2: Connect the Live Line to the following male connector.



TIPS: The connectors that are used to modify the Live Line and connected an external RSD Switch include a male terminal and a female terminal, as shown in following:

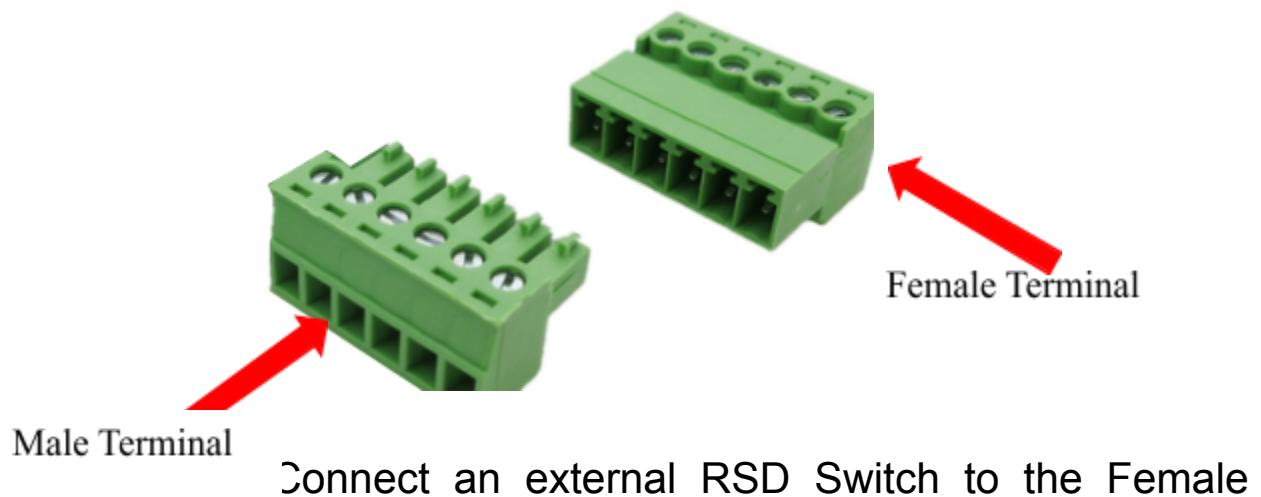

Connector.

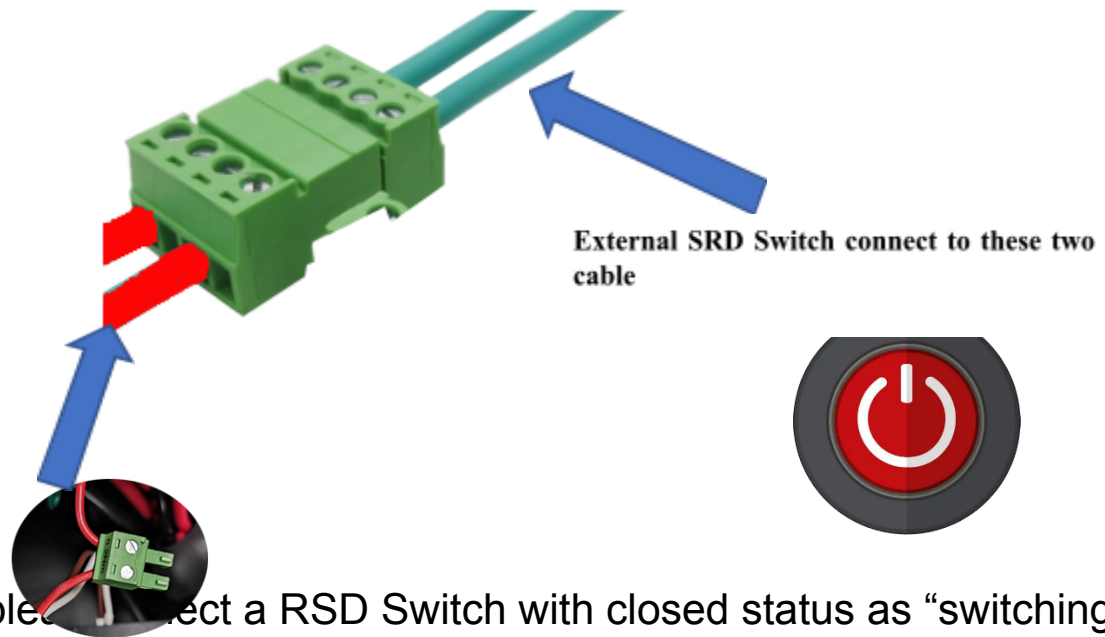

Note: please select a RSD Switch with closed status as “switching on condition”. The system will keep on normal working condition if the External RSD Switch stay in closed status, while the Rapid Shut Down will take action while the External RSD Switch is in the status of opening.